


INSTRUCTIONS for "5" SERIES HAMMERLESS FASTENER

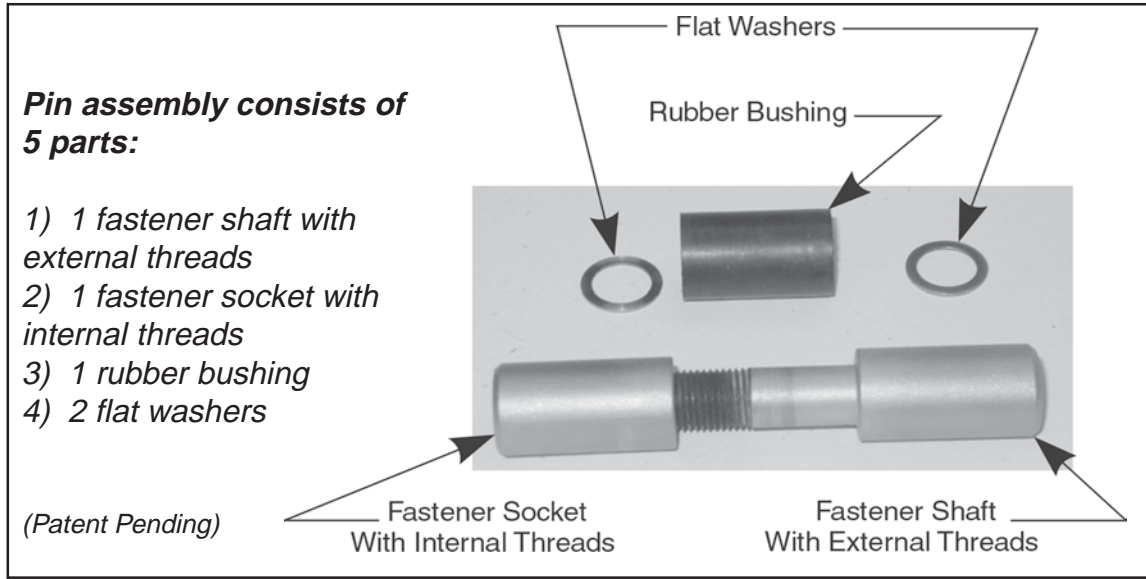

INSTALLATION:


Slide a flat washer over externally threaded fastener shaft. Next, slide rubber bushing over externally threaded fastener shaft. Install the second flat washer behind the rubber bushing. Thread the pin halves together to the rubber bushing, but do not compress the bushing. (Fig.1)

Install into tooth/adaptor centering the pin top to bottom if used in top mount system, or side to side if used in side mount system. Use appropriate drivers in each half and tighten as far as possible, keeping pin centered while tightening.

REMOVAL:

Using appropriate drivers, remove either half by unthreading the fastener. Remaining parts of pin can be pushed out of the pin hole.

Figure 1

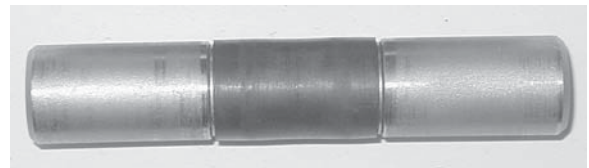

Assembled Hammerless Pin Uncompressed



Assembled Hammerless Pin Compressed
(visual reference only)

Hensley Customer Service

Toll Free US / Canada
Phone: (888) 406 - 6262
Fax: (888) 241 - 3274

www.hensleyind.com

All Other Locations
Phone: (972) 406 - 6262
Fax: (972) 241 - 3274

Copyright © 2002 Hensley Industries, Inc.
This publication is protected under the copyright laws of the United States.
Unauthorized duplication or distribution is prohibited.

SAFETY FIRST: Hensley Industries recommends that you use a soft-faced hammer and ANSI-approved (Z87.1) eye protection when using our products.